INCO°

DIRECTIONS FOR USING THE PRODUCT

取扱説明書

INKO ヒーティングベルト Haramaki をお買い 上げいただきありがとうございます。ご使用の 前に本取扱説明書をよくお読みになり、大切に 保管してください。


Thank you for purchasing the INKO Microfiber Electric Heating Belt. This manual also serves as a warranty card. Please keep this manual for the safety and operating.

※ 本製品は医療機器ではありません。



WWW.INKO.CO.JP

製造元: PARU Co., Ltd. 販売元:株式会社ロア・インターナショナル カスタマーセンター:support@roa-international.com メールでのお問い合わせについては随時受付しておりますが、 確認・返信については営業時間内とさせていただいております。 営業時間 平日 AM9-00 ~ PM6-00 (土日祝日休み)

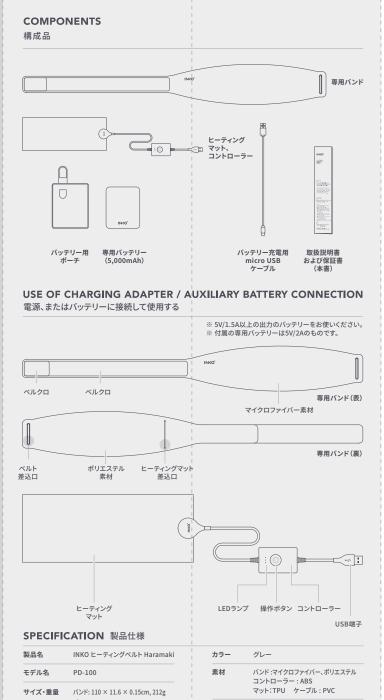

パッド: 8 × 23 × 0.1cm, 16.5g コントローラー: 2.5 × 3.5 × 1cm, 20g バッテリー: 6.9 × 9.6 × 1.4cm, 114.5g

消費電力 7W (5V / 1.4A)

INCO

製品保証書

構成品 専用バンド、コントローラーつきヒーティングマット、 専用バッテリー(3.7V/5.000mAh)、バッテリー用ポーチ、 バッテリー充電用micro USBケーブル

コントローラー 3段階温度調節

製品名 INKO ヒーティングベルト Haramak 購入年月日 購入店舗 お客様情報 お名前 ご住所 連絡先 保証期間 ご購入旧か 株式会社ロア・インターナショナル 販売元 http://www.roa-international.com

HOW TO OPERATE

使用方法

ヒーティングマットをバンド裏側のヒーティン グマット差込口に挿入し、モバイルバッテリー と接続して使用します。

電源オン

リモコンのコントロールボタンを押すと電源 がオンになります。

電源をオンにすると、温度レベルは自動的に レベル 3(最高約 55℃)の設定になります。 それからボタンを押すごとにレベル 2、レベル 1と下がっていきます。

□ 注意

レベル3で使用した場合、 非常に高温になります。 屋外での仕事・アウトドアなど 0℃を下回る環境での使用を推奨します。













雷源オフ

コントロールボタンを押すごとにレベル 2. レ ベル1と設定温度が下がっていき、3回目でオ フになります。





安全のため、30分が経過すると自動的にオフ になります。



・お使いの前に本取扱説明書をよくお読みの上、 大切に保管してください。



汚れた場合はバンドからヒーティングマットと バッテリーを外してから洗濯してください。

・バンド部は洗濯可能です。





※ヒーティングマット、バッテリーは洗えません。 必ず取り外し、バンド部のみを洗濯してください。

注意・禁止

- 1. 使用する際は肌に直接当てないでください。
- 2. 畳んだ状態で使用すると、内側が 50℃以上になり
- 前にかかりつけの医師または皮膚科医に相談してく
- 5. 本製品は医療機器ではありません。本説明書に記載 の使用法以外では使用しないでください。
- 6. 破損したコードは使用しないでください。
- 7. 濡れた手で電源の抜き差しを行わないでください。 8. ご自身での修理・改造はおやめください。

- 9. ラジエーター、ストーブ、またはその他の熱を発するも のの近くに設置しないでください。
- 10. 本製品を過度に曲げたりねじったりしないでください。
- 11. 水分を取り除いて乾かしてからご使用ください。
- 12. 同梱の専用バッテリーをお使いください。
- 13. 尖ったもので本製品を傷つけないでください。
- 14. ラテックス素材のものと併せて使用しないでください。 火災の原因になることがあります。
- 15. ご使用の際は本製品が乾いていることを確認してください。 16.3歳以下のお子様、またお年寄りは使用しないで ください。
- 17. 小さなお子様やお年寄りがご使用になる場合は保護者
- の監督のもとご使用ください。
- 18. ヒーティングマットとバッテリーは防水ではありません。 バンド部以外は洗濯しないでください。



購入店の情報・購入履歴が確認できない場合、保証は無効となります。 レシート発行の無い個人間の売買の場合、保証の対象外となります。 本製品購入時に、上記のお客様情報欄にご記入ください。

本保証書は、正常な使用状態で起きた故障について、無償で修理または交換を

ンのす。 購入時の初期不良、同梱品の欠品・不足について、無償で交換または補填 また、購入時の を保証します。

【免责事項】

- ※本製品の使用や故障により生じたいかなる人的損害・物的損害・デー
- ※高温で長時間、または肌に直接使用すると低温やけどを負うおそれがあります。ご 注意ください。

※スマートヒューズシステム (緊急停止装置) が作動し、製品の再起動が不可 能となる事については、本製品の仕様となるため保証の対象外となります。 ※お客様により修理または改造等を加えた場合、保証は無効となります。 ※天災・公害・人為的事故による故障は保証しません。 ※お客様の責任による部品の紛失については保証しません。 その他、弊社の責とはいえない事由による故障については、保証しません。



※本取扱説明書に書かれた使用方法・警告・注意事項に反した使用方法による故障 は保証しません。

タの損害について、弊社は責任を負いません

※日本国内のみ保証の対象となります。






WWW.INKO.CO.JP


製造元: PARU Co., Ltd. 販売元:株式会社ロア・インターナショナル カスタマーセンター: support@roa-international.com メールでのお問い合わせについては随時受付しておりますが、 確認・返信については営業時間内とさせていただいております。 営業時間 平日 AM9:00 ~ PM6:00 (土日祝日休み)

COMPONENTS

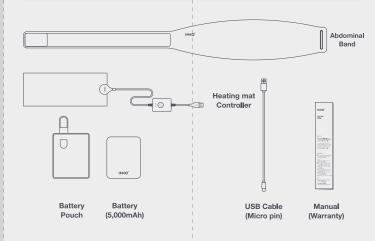

USE OF CHARGING ADAPTER / AUXILIARY BATTERY CONNECTION

* Use a power supply at least 5V/1.5A

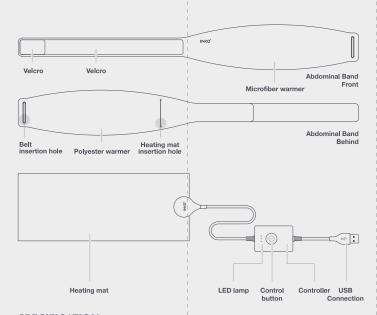

SPECIFICATION

Product Name INKO Premium Slim Fit Warmer		Product Cold	Product Color Gray	
Model	PD-100	Cover	Band (Microfiber&Polyester)	
		l .	Controller (ABS), Cable(PVC)	
Dimension	Band: 110 x 11.6 x 0.15cm, 212g		Heating Mat (TPU)	
	Pad: 8 x 23 x 0.1cm, 16.5g			
	Controller: 2.5 x 3.5 x 1cm, 20g	Components	Abdominal band, Heating mat,	
	Battery: 6.9 x 9.6 x 1.4cm, 114.5g	I I	Controller, Battery(5,000Ah), USB jac	
Power	7W(5V 1.4A)	Controller	3-state temperature control	

WARRANTY

This manual also serves as a warranty card. For inquiries on repairs, usage, or maintenance please contact customer service center.

- The warranty is valid for 1 year from the date of purchase. After the warranty period, repairs will be made at a cost-effectively.
- Spare parts will be available for 5 years after the suspension of manufacturing.

Customer Privacy Policy

- · We use and provides user's personal information based on regulations and guarantees the user's right.
- We collects the minimum personal information to provide the Services.
- We comply personal information protection regulations and guidelines.

HOW TO OPERATE


Turning the power on

After pressing the power button, power on and automatically set to 55°C.



Temperature setting

As the power on, the temperature level sets as level 3(55°C) automatically. Press the button one, two times for different temperatures setting; the temperature drops off level 3(55°C), level 2(47°C), level 1(40°C).

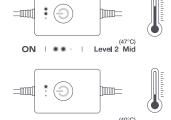

Turing the device off

After pressing the power button four times, the device will turn off.



ON | . · · | Level 1 Low

This product turns off automatically after 30 minutes.









INSTRUCTION FOR USE

Please read the precautions in this manual for safe and effective use.

- If the product gets sweaty or wet, dry it with a hair dryer or dry it naturally.
- The heating mat is not washable.
- The microfiber and polyester can be lightly washed with neutral detergent, but avoid machine washing.
- For inquiries on repairs, usage, or maintenance, please call our customer service center.
- There are possibilities of burns if used for a pro-longed time, do not use directly on the skin.





SAFETY PRECAUTIONS - WARNING, CAUTION

- There are possibilities of burns if used for a pro-longed time, do not use directly on the skin. Do not use infants under 3 years of age.
- Do not use the elderly.
- If you have skin sensitivity or allergies with the materials, please consult you physician or dermatologist before continued usage.
- Do not use damaged power cord.
- Do not install the product near any other heat sources such as radiators, heat registers, stoves, or any firenlaces
- A high level of humidity can cause internal component issues. Avoid using the device in areas of high humidity.
- Do not bend or twist the device.

www.inko.co.kr

- This product cannot be used for medical purposes.
- For more details, please visit our website.

- · Use the battery packaged together.
- · Do not use excessive force when handling the device.
- · Do not use damaged power cord.
- · Do not use in places with a lot of dust.
- · Heat from the battery is normal operation, do not place the battery on the heater.
- · There is a risk of damage by pets, so be careful.

